

**TREASURE
PRODUCTS**

detectors with a pulse

Vibra-Phone™

Replace Sound with Vibration

280



Thank you for choosing the Vibra-Phone 280 made by Treasure Products, Inc. Now you're ready to enjoy the freedom of never having to wear headphones again!

The Vibra-Phone 280 takes the output from the headphone jack of your metal detector and converts that sound into vibration. This will allow you to feel your detections instead of having to hear them. It's designed for treasure hunters that are hearing impaired or for those who are just tired of wearing headphones.

The Vibra-Phone 280 works with all common metal detectors with a 1/4" headphone jack. No modifications or special tools are needed. Just clip it to your metal detector, plug it in and you're ready to go.

Treasure Products, Inc. 877.304.7788

1464 Madera Rd. #N195, Simi Valley, CA 93065
Visit us online at www.treasureproducts.com

2010-01A

OPERATING INSTRUCTIONS

Operation: Vibra-Phone 280 attaches to your metal detector. The cord on the Vibra-Phone plugs directly into the regular headphone jack on your detector. The sound that you would normally hear in your headphones is directed into the Vibra-Phone 280 and is then converted into vibration.

Mounting: Snap the Vibra-Phone 280 onto the pole of your metal detector, preferably under the arm portion. Plug the stereo cable on the Vibra-Phone 280 into the headphone jack of your metal detector.

Note: If your detector is not built with conventional 'round tubing', you can use a short piece of standard schedule 40 plastic pipe (commonly used in sprinkler systems).

Attach the pipe to your metal detector securely with hose clamps or plastic tie-wraps. Then attach your Vibra-phone to that new piece of pipe.

Battery: Uses one standard 9 volt. To install rotate the rear knob counter-clockwise a few turns and remove the compression seal. Connect the battery and insert top end first. Replace the seal and hand tighten turning clockwise to secure.

Note: Weak or nonexistent vibrations may indicate a low battery.

Turn on: Rotate the 'Sensitivity' knob clockwise. It will click as you move from the 'off' position. The unit is now on.

Turn off: Rotate the 'Sensitivity' knob full counter-clockwise until it clicks. The unit is now off.

ADJUSTMENTS

Sensitivity Knob: The sensitivity is adjusted by rotating the 'Sensitivity' knob.

For detectors with a 'threshold sound', adjust the sensitivity up until you feel the vibration from the threshold then back it off until it stops vibration. This is the most sensitive point. All others detectors simply rotate the 'Sensitivity' knob full clockwise to its maximum position.

Pulse width Knob: This adjusts the length or 'Pulse width' of vibration you feel. Adjust the "Pulse width" pot using a standard slot screwdriver. If your detector has a short sharp tone when a target is detected you may have difficulty feeling it when it is converted to vibration. Adjust the pot to increase the length of the vibration you will feel. Once you've adjusted the pot to your liking you should not have to change it again.

CARE AND MAINTANANCE

Remember to always turn the 'Sensitivity' knob to the 'Off' position when not in use to conserve battery life.

When the Vibra-Phone 280 is in the off position there is no drain on the battery. However, for long periods of storage, we recommend you remove the battery from the battery compartment to prevent damage to the device due to potential battery leak.



Always use high quality batteries such as alkaline or nickel metal hydride (NiMH).

Other fine products from Treasure Products, Inc.

Vibra-Probe™ 580

Pinpointer



- Communicates with vibration.
- Pulse induction Technology
- Water proof - It's submersible

Vibra-Tector™ 730

Pulse Induction Metal Detector



- Signals with vibration and light
- Waterproof - Submersible
- Great for divers!

E-Z Swing™

Arms and shoulders tired from swinging that heavy detector?

That's why we created the EZ-SWING Harness.

- Fully adjustable



VIBRA-PHONE 280 SPECIFICATIONS

- Communication • Vibration
- Connection • 1/4" Stereo Phono Plug
- Sensitivity • Adjustable
- Pulse Width • Adjustable
- Overall Length • 7 inches (18 cm)
- Weight • 8 oz. (227 grams)
- Power • Standard 9 volt battery
- Warranty • 1 year
- Battery • Included

Specifications are subject to change without notice.

TREASURE PRODUCTS LIMITED WARRANTY

What does this warranty cover?

Treasure Products warrants that its products are free from defects in material and workmanship under normal use for a period of one (1) year from the date of purchase.

Warranty extends only to original purchaser and is not transferable.

What is not covered by this warranty?

This warranty does not cover any accessories, or any consumables, as to which there shall be no warranty or replacement. This warranty does not cover conditions or damages caused by accidents, alterations or misuse. In addition, damage due to normal wear and tear is not covered by this warranty.

What is needed to keep the warranty in service?

You must provide proof of purchase as a condition of receiving warranty service. Your dated sales receipt, showing the date of purchase of your product is your proof of the purchase date.

What will Treasure Products do to correct problems?

Treasure Products will repair or replace, at Treasure Products' sole discretion, any defective, nonconforming, or malfunctioning product or any component thereof.

How do you get service?

If you require warranty service, call Treasure Products, Inc. at (877) 304-7788 to speak with a Treasure Products technical support representative or email us at sales@treasureproducts.com prior to sending your unit in for service.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

©2010 Treasure Products, Inc. All rights reserved.

Designed and Manufactured by Treasure Products, Inc.

Made in the USA