

**TREASURE
PRODUCTS**

detectors with a pulse

Vibra-Tector™

Pulse Induction Metal Detector **730**



Thank you for choosing the Vibra-Tector 730 metal detector made by Treasure Products. The unique sealed design allows detecting in any environment including grass, mud, dirt, sand, black sand, or even in fresh or salt water.

PRODUCT FEATURES

- **Communicates with vibration & light** - When a target is located the Vibra-Tector 730 signals with pulses of vibration and flashes of bright light from a white L.E.D.
- **Pulse Induction Technology (PI)** - Allows hunting in salt water or in any type of soil, including black sand.
- **Detection depth stability** - Advanced circuitry maintains detection distance throughout the life of the battery.
- **Target distancing** - As you get closer to the target the pulses of vibration and light will increase in quantity.
- **Automatic tuning** - The state of the art microprocessor controlled design requires no adjustments of any kind.
- **Waterproof** - Sealed design allows hunting in the rain or under water to a depth of 100 feet. Great for divers!

Treasure Products, Inc. 877.304.7788

1464 Madera Rd. #N195, Simi Valley, CA 93065
Visit us online at www.treasureproducts.com

BATTERY INSTALLATION

When the knob of the battery compartment seal is rotated clockwise, the plug expands and presses against the inside wall of the battery compartment, sealing the unit.

To open the battery compartment seal, rotate the knob counter-clockwise a few turns, then pull to remove.

Connect a standard 9v battery to the battery clip and insert the battery into the detector, clip side first.

To replace the seal, insert all the way in. Then turn the knob clockwise until hand tight to assure a water-tight seal.



Before submerging the Vibra-Tector make sure the battery compartment seal is secure.

OPERATING INSTRUCTIONS

Turn on sequence: Hold unit with the search coil up for at least 5 seconds. Light will blink. Two short pulses of vibration and a steady dim light indicate unit is on.

Turn off sequence: After use, hold unit with the search coil up for at least 5 seconds. Light will blink. Two long pulses of vibration and no light indicate the unit is off.

Low battery turn off: When the battery is low the unit will shut down automatically indicated by four long pulses.

Operation: The Vibra-Tector communicates through pulses of vibration and bright light. These pulses increase in quantity the closer the search coil is to a target.

The quantity of pulses is proportional to the target size and distance. The bigger the target, or the closer the search coil is to the target, the higher the pulse count.

The detection field projected resembles a cone shape, with the deepest depth of detection in the center of the coil.

Move the search coil in a sweeping motion along the surface of the area you are searching. The slower the sweep the deeper the detection depth.

IMPORTANT NOTES

Raising the detectors coil up while in use will start the turn-off sequence, indicated by a blinking light. Lower the detectors coil within 5 seconds to continue detecting.

Unit will not detect when the light is blinking in either the turn-on or turn-off sequence.

As with any new detector you should practice with known targets to develop your technique.

HELPFUL HINTS

If you continue to hold the detector with the coil up after turn on, then the detector will remain on indefinitely. This feature may be useful if searching with the detectors coil in a vertical position is necessary.

You can secure the Vibra-Tector to your wrist using the attached wrist strap. To adjust fit, press down on the cord lock button and move it to the desired location.

CARE AND MAINTANANCE

Your Vibra-Tector is a sensitive electronic instrument. Although it is rugged, care in transporting and handling will extend its life and result in optimum performance.

When the Vibra-Tector is off there is no drain on the battery. However, if stored for long periods of time, we recommend that the battery be removed to prevent damage to the detector due to a potential battery leak.

If the detector has been exposed to salt water always rinse with fresh water and check the battery compartment for any leaks. If water has entered the battery compartment carefully wipe dry and leave open until completely dry.



Always use high quality batteries such as alkaline or nickel metal hydride (NiMH).

Other fine products from Treasure Products, Inc.

Vibra-Phone™ 280



Hearing impaired?
Don't like headphones?
Replace sound with vibration.

Vibra-Probe™ 580 Pinpointer



- Communicates with vibration.
- Pulse induction Technology
- Water proof - It's submersible

E-Z Swing™

Arms and shoulders tired from swinging that heavy detector?

That's why we created the EZ-SWING Harness.

- Fully adjustable



VIBRA-TECTOR 730 SPECIFICATIONS

- Detection Type • Pulse Induction
- Search Mode • All metal
- Overall Length • 17 inches (43 cm)
- Coil Diameter • 4 inch (10 cm)
 - Weight • 1 lb. (450 grams)
- Power • Standard 9 volt battery
- Warranty • 1 year
- Battery • Included
- Wrist Strap • Included

Specifications are subject to change without notice.

TREASURE PRODUCTS LIMITED WARRANTY

What does this warranty cover?

Treasure Products warrants that its products are free from defects in material and workmanship under normal use for a period of one (1) year from the date of purchase.

Warranty extends only to original purchaser and is not transferable.

What is not covered by this warranty?

This warranty does not cover any accessories, or any consumables, as to which there shall be no warranty or replacement. This warranty does not cover conditions or damages caused by accidents, alterations or misuse. In addition, damage due to normal wear and tear is not covered by this warranty.

What is needed to keep the warranty in service?

You must provide proof of purchase as a condition of receiving warranty service. Your dated sales receipt, showing the date of purchase of your product is your proof of the purchase date.

What will Treasure Products do to correct problems?

Treasure Products will repair or replace, at Treasure Products' sole discretion, any defective, nonconforming, or malfunctioning product or any component thereof.

How do you get service?

If you require warranty service, call Treasure Products, Inc. at (877) 304-7788 to speak with a Treasure Products technical support representative or email us at sales@treasureproducts.com prior to sending your unit in for service.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

©2009 Treasure Products, Inc. All rights reserved.

Designed and Manufactured by Treasure Products, Inc.

Made in the USA