

# Vibra-Phone<sup>®</sup>

Sound to Vibration Converter **280**



Thank you for choosing the New Vibra-Phone 280 made by Treasure Products, Inc. Now you're ready to enjoy the freedom of never having to wear headphones again!

The New Vibra-Phone 280 takes the output from the headphone jack of your metal detector and converts that sound into vibration. This will allow you to feel your detectors signaling instead of having to hear it.

It's designed for those that have difficulty hearing tones and whistles or are just tired of wearing headphones.

**Note: The Vibra-Phone is not waterproof and should not be submersed or exposed to water.**

**TREASURE  
PRODUCTS**

Made in USA  
Treasure Products Inc.  
www.TreasureProducts.com

Vibra is a registered trademark of Treasure Products Inc.

## Battery Installation

### Battery Type

Uses one standard 9-volt battery.

### Opening Compartment

Push down slightly on the ridged area of the cover with your thumb and slide it away from the body.

### Connecting Battery

Connect a standard 9-volt battery to the battery clip and insert it into the battery compartment.

### Closing Compartment

Replace the battery cover by sliding it back into position until it aligns fully with the main body.



Note: Weak or nonexistent vibrations may indicate a low battery.



Use only high-quality batteries such as alkaline or nickel metal hydride (NiMH).

## Placement

### Strap Mount (Recommended)

Use the included *Hook & Loop Strap* to tightly wrap the Vibra-Phone to the pole of your detector (See image).



### Alternative Placement

- Place it in your pocket for easy carrying.
- Hold it in free hand for quick sensitivity adjustments.

## Connection

### Audio Cable

Plug one end of the cable into the Vibra-Phone. Route any excess cable through the mounting strap or wrap it around your detector pole. Plug the other end of the cable into your detectors headphone jack.

### Audio Adapters

If your detector has a 1/4" jack, plug the included Stereo Adapter onto the end of the audio cable.



**Note:** Some detectors may require the Mono Adapter for the Vibra-Phone to function properly. If your detector is producing sound, and there is no vibration from the Vibra-Phone, you'll want to use the included Mono Adapter.



## Operation

### Overview

The sound that you would normally hear in your headphones is directed into the Vibra-Phone where it is converted into vibration.

### Power on

Rotate the Sensitivity knob clockwise *from* the position shown in image. The unit is now **ON**.

### Power off

Rotate the 'Sensitivity' knob fully counterclockwise until it clicks and is in the position shown in image. The unit is now **OFF**.



### Settings

The Sensitivity adjusts how sensitive the unit will be to the tones your detector generates. The Pulse Width adjusts the length of time a vibration lasts for each tone. Both can be adjusted to your liking. (See Adjustments for more details)

Continued on back ➡

# Adjustments

## Sensitivity

You can adjust how sensitive the Vibra-Phone is to the tones your detector generates. Set the Sensitivity level so that you can feel a pulse of vibration each time your detector detects an object, or each time your detector generates a tone.

The sensitivity is adjusted by rotating the 'Sensitivity' knob. For maximum sensitivity, rotate the knob to the full clockwise position.

For detectors with a 'Threshold Sound', adjust the sensitivity up until you feel the vibration from the threshold, then back it off until the vibration stops.

## Pulse Width

Adjusting the Pulse Width will vary the length of time a vibration lasts. This is how long the pulse of vibration will be for each tone that your detector generates.

If your detector has short sharp tones when a target is detected, you may not feel them when they are converted to vibration. To remedy this, you can adjust the Pulse Width, or length of vibration, so that you don't miss these tones.

The Pulse Width adjustment is done by turning the pot. Rotating the pot clockwise will shorten the vibration. Rotating the pot counterclockwise will lengthen the vibration.

Once you've adjusted the pot to your liking, you should not have to change this adjustment again.

...

# Product Care

• Remember to turn the Sensitivity knob to the *OFF* position when not in use to conserve battery life.

• When the Vibra-Phone is off there is no drain on the battery. However, if stored for long periods of time, we recommend removing the battery to prevent damage to the unit due to a potential battery leak.

## VIBRA-PHONE 280 SPECIFICATIONS

- **Manufacturer:** Treasure Products, Inc.
- **Model:** Vibra-Phone 280 (Rev A)
- **Communication:** Vibration
- **Sensitivity:** Adjustable
- **Pulse Width:** Adjustable
- **Overall Length:** 5 inches (13 cm)
- **Weight:** 4 oz. (141 grams)
- **Power Source:** One standard 9 volt
- **9-volt Battery:** Included
- **Audio Cable 3 ft:** Included
- **Stereo & Mono Adapters:** Included
- **Mounting Strap:** Included
- **Warranty Period:** 1 year
- **Origin:** Made in the USA

**Note: This unit is not waterproof. Do not submerge or expose to water.**

Specifications and features are subject to change without prior notification.

## Other Equipment by Treasure Products, Inc.

**Vibra-Tector** - Pulse Induction Metal Detector  
**Vibra-Probe** - Pinpointer Metal Detector  
**E-Z Swing** - Metal Detector Harness

# Limited Warranty

## What does this warranty cover?

Treasure Products warrants that its products are free from defects in material and workmanship under normal use for a period of one (1) year from the date of purchase. Warranty extends only to original purchaser and is not transferable.

## What is not covered by this warranty?

This warranty does not cover any accessories, or any consumables, as to which there shall be no warranty or replacement. This warranty does not cover conditions or damages caused by accidents, alterations or misuse. In addition, damage due to normal wear and tear is not covered by this warranty.

## What is needed to keep the warranty in service?

You must provide proof of purchase as a condition of receiving warranty service. Your dated sales receipt, showing the date of purchase of your product is your proof of the purchase date.

## What will be done to correct the problem?

Treasure Products will repair or replace, at Treasure Products' sole discretion, any defective, nonconforming, or malfunctioning product or any component thereof.

## How do you get service?

If you require warranty service, contact Treasure Products prior to sending your product in for service. You can find contact information on our website at [www.treasureproducts.com](http://www.treasureproducts.com) > support > contact.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

...

© 2002-2024 Treasure Products Inc.  
All rights reserved. Made in USA.

Designed and manufactured by Treasure Products.  
Vibra is a registered trademark of Treasure Products.

032024A2